


EXPLODED VIEW MODEL BH051V

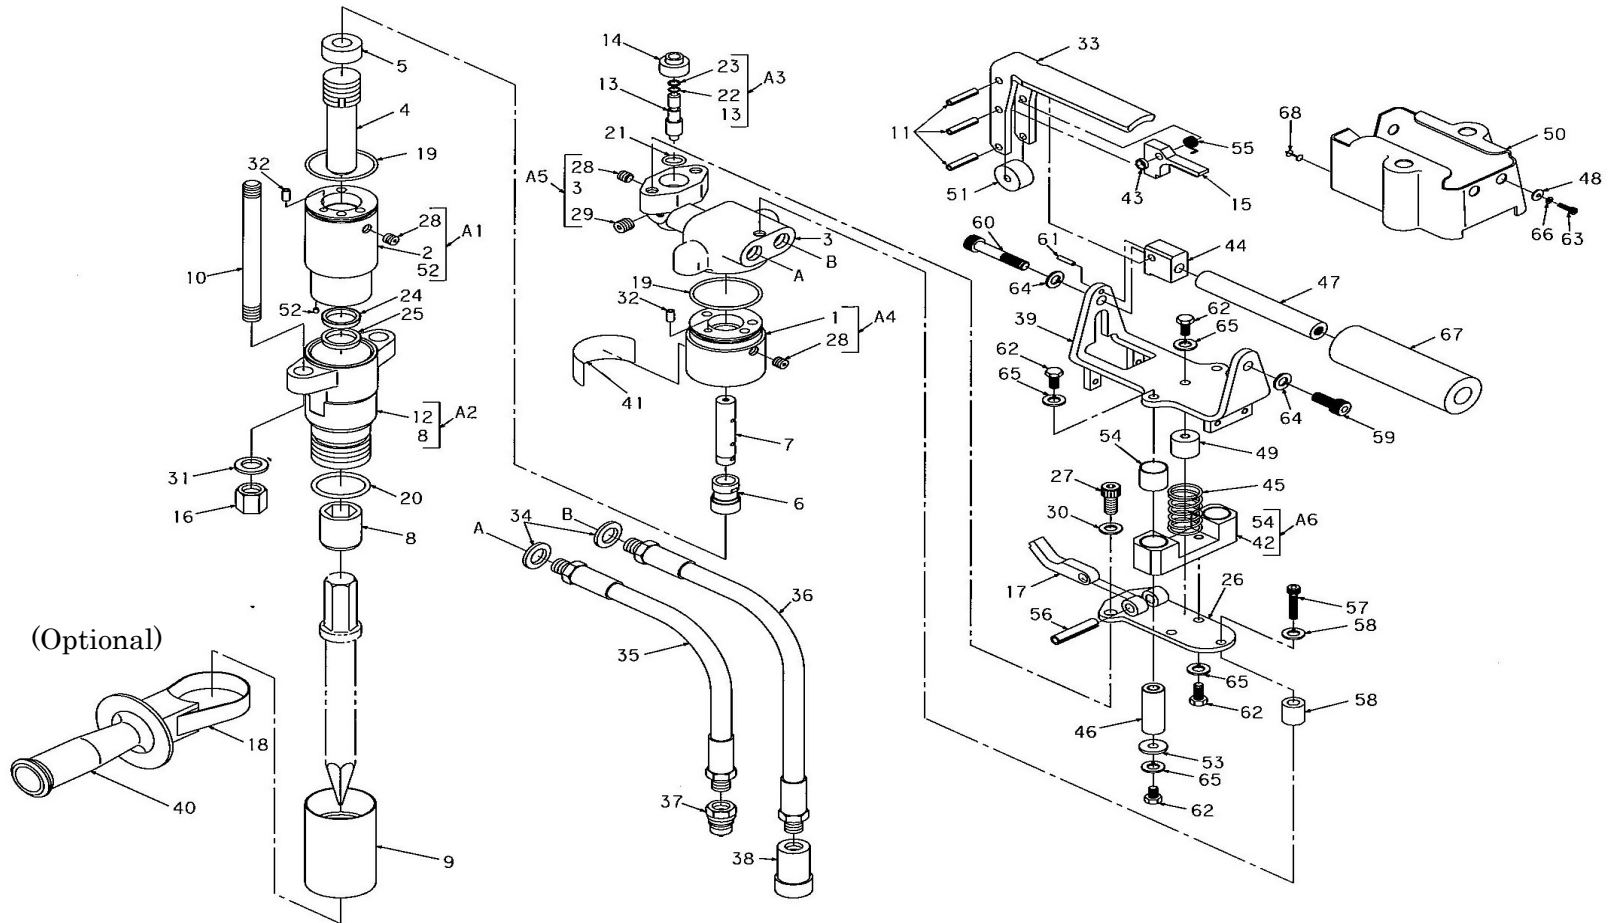

PARTS LIST MODEL BH051V

No.	Code	Descriptions	Q'ty	No.	Code	Descriptions	Q'ty
1	MB17Y201A	Valve Body	1	29	BPH – PT 1/8	Plug	1
2	MB11Y202A	Cylinder	1	30	WF – 8 2L	Spring Washer	2
3	MB27X015A	Head Cover V	1	31	WF – 12 2L JIS B 1252	Spring Washer	2
4	MB11Z204A	Piston	1	32	PR – 5 x 10	Spring Pin	2
5	MB11Z205A	Piston Guide	1	33	MB27Y013A	Control Lever	1
6	MB11Z207A	Control Valve	1	34	W18S1	Seal Washer	2
7	MB11Z207A	Piston Rod	1	35	21091 · 3--30--	High Pressure Hose	1
8	MB11Z208A	Chisel Busing	1	36	21091 · 3--45--	Low Pressure Hose	1
9	MB11Z010A	Front Cap	1	37	QC-03M	Coupler (Male)	1
10	MB11Z210A	Draw Bolt	2	38	QC-03F	Coupler (Female)	1
11	PR – 6 x 28	Pin	3	39	MB27Y009A	Handle Stay	1
12	MB11Y008A	Front End	1	40	001762	Side Handle Set	1
13	MB27Z002A	Valve Rod	1	41	M1XTE117A	Maruzen Sticker	1
14	MB11Z013A	Valve Guide	1	42	MB27Z027A		1
15	MB27Z008A	Lever	1	43	AWSC-E-D12-V6.5-T3	Washer	1
16	1034 – 703	Draw Bolt Nut	2	44	MB27Z001A	Block	1
17	MB27Z003A	Cam	1	45	MB27Z006A	Spring	1
18	MB11Z016A	Band	1	46	MB27Z005A	Shaft	2
19	OS – 48	O Ring	2	47	1120 – 422	Grip Shaft	1
20	OP – 40	O Ring	1	48	MB27Z007A	Collar	4
21	OP – 16	O Ring	1	49	MB27Z004A	Spring Guide	1
22	OP – 5	O Ring	1	50	MB27Y012A	Collar	1
23	OBP – 5	Back Up Ring	1	51	FNCLCH – V6.5 – D15 – L16	Metal Collar	1
24	IUIS 20, 28, 5	U Cup Packing	1	52	MB850 – 040	Expander	2
25	LBI 20, 28, 4.5, 6	Dust Seal	1	53	WSSB20 – 6 – 2	Metal Washer	2
26	MB27Y026A	Base	1	54	DUB15 x 25	DU Bush	2
27	BH – 8 x 15	Bolt	2	55	SAMINI7132	Spring	1
28	BPH – PT 1/16	Plug	7	56	PR – 8 x 30	Spring Pin	1

No.	Code	Descriptions	Q'ty	
A1	MB11Z211A	Cylinder Assy	1	2,28, 52
A2	MB11Z216A	Front End Assy	1	8,12
A3	MB27Z019A	Valve Rod Assy	1	13,22,23
A4	MB11Z215A	Valve Body Assy	1	1,28
A5	MB27Z021A	Head Cover Assy	1	3,28,29
A6	MB27Z029A		1	42,54
A7	MB11Z214A	Seal Kit	1	19(2), 20, 21, 22, 23, 24, 25